


Figure 1

### To Adjust Citizen Printer Cutter

1. Turn off power to the printer
2. Open the lid of the printer
3. Press down and pull out on the Front Cover, as shown in Figure 1. This will expose the Cutter Adjustment screws, as shown in Figure 2.
4. Remove both screws from the Cutter Adjustment Tab.
5. Slide the Tab to **F** for **Full Cut**, **P** for **Partial Cut**.
6. Replace the screws to hold the new setting.
7. Replace the Front Cover
8. Close the lid of the printer.
9. Test Print a ticket to ensure the proper setting.

Figure 2

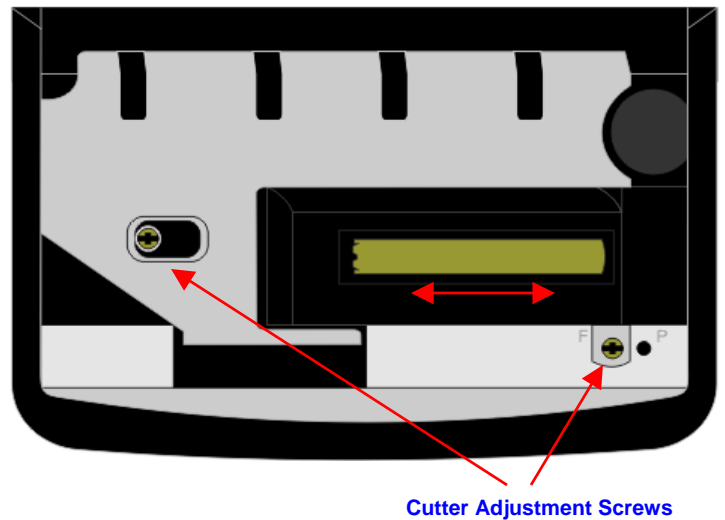

Cutter Adjustment Screws